



## 30W SOLAR FLOOD LIGHT

**VOL-SFL-030-CW**



### SECTION 1: SPECIFICATIONS

FITTING PANEL	BLACK
MATERIAL	ALUMINUM
COLOR TEMPERATURE	6000-6500 K
SUPPLY VOLTAGE	6V10W SOLAR
BEAM ANGLE	120°
WATTAGE	30 W
DIMENSIONS OF PANEL	175 x 190 x 17 mm
LUMENS	3000 lm
POWER FACTOR	>0.9
ESTIMATED LIFE	25000 HOURS
DIMENSIONS OF FLOOD	200 x 250 x 60 mm
RUN TIME	12-14 HRS/DAY
IP RATING	IP65
CHARGING TIME	3-4 HRS DIRECT LIGHT

#### CERTIFICATIONS

**RoHS**  
Compliant

**CE**

**UL**

## SECTION 2: PRODUCT INSTALLATION GUIDE

1. THE SOLAR LIGHT IS CHARGED IN THE FACTORY AND CAN BE LIT NORMALLY. PLEASE CHECK IF IT WORKS NORMALLY BEFORE INSTALLATION
2. PRESS THE ON/OFF SWITCH ON THE FRONT OF THE LAMP FOR 3-5 SECONDS AND RELEASE. THE LIGHT WILL BE ON. TO SWITCH OFF THE LIGHT, PRESS THE ON/OFF SWITCH AGAIN.
3. FIXED THE LIGHT ON THE WALL WITH FOUR EXPANSION. THE LIGHT CAN BE ADJUSTED ACCORDING TO YOUR NEEDS.
4. THE LIGHT CANNOT BE INSTALLED IN LOW-LYING AREAS.
5. CONNECT THE MALE & FEMALE PLUG AND TIGHTEN THE WATERPROOF NUT TO FINISH THE INSTALLATION.
6. EXAMINE AFTER THE INSTALLMENT - CHECK IF THE LIGHT AND SOLAR PANEL HAVE BEEN FIXED CORRECTLY AND CHECK THE SWITCH OF THE REMOTE CONTROL.

## SECTION 3: INSTRUCTION OF REMOTE CONTROL

1. CHECK THAT THE DRY BATTERY IS CORRECTLY INSTALLED. (DRY BATTERY NOT INCLUDED)
2. MAXIMUM REMOTE CONTROL DISTANCE 10 M
3. USE THE KEY BUTTONS.

**ON/OFF:** Control light on and off

☀ 100% brightness

☀ 50% brightness

**AUTO** Automatic mode

**3H** Timing, keep on lighting for 3 hours

**5H** Timing, keep on lighting for 5 hours

**8H** Timing, keep on lighting for 8 hours

